


ACCESSORIES 



Alder	
Alder 12"W x 5"H, 25 pc	51086



Cleaning Swabs	
Laser optics cleaning swabs, 10 pc	30864

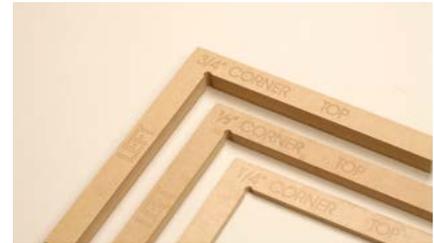

Corner Jigs	
¼, ½, ¾ jigs	63066

These jigs are used when engraving the product.



Cleaning Tissue	
Laser optics cleaning tissue	51213



Magnets	
1½"W x 2"H 150 pc	63056



Laser Bed Alignment	
Laser Alignment Plate	63085

**Laser Bed Alignment**

1. Place the alignment plate in the top left corner of the laser bed
2. Run this file
3. Measure the offset between the box you lasered, and the box that was already lasered.
4. Turn the laser off, then back on.
5. As soon as the word "Gravograph" appears on the display, press and hold the X button.
6. Select the option "ReAlign Machine"
7. Select the option (ReAlign XY)
8. Increase or decrease the X and Y values by the offset you measured
9. Press the check button, it will beep if the new values are accepted.

**Troubleshooting**

If your machine will not allow the offset you need to enter, you'll need to reset your fence. In the package of tools that arrived with the machine, there will be an allen wrench that will fit the screws along the rulers on the X and Y axis. Move the rulers as far in as possible. Run your red light along each axis to ensure the rulers are secured straight.